




STRAINERS &  
PRESSURE VESSELS

...Engineering Value

Engineering Data  
Temporary Conical Strainers

### Temporary Conical Strainer Pressure Drop — Liquids (Sizes 150-1200mm)

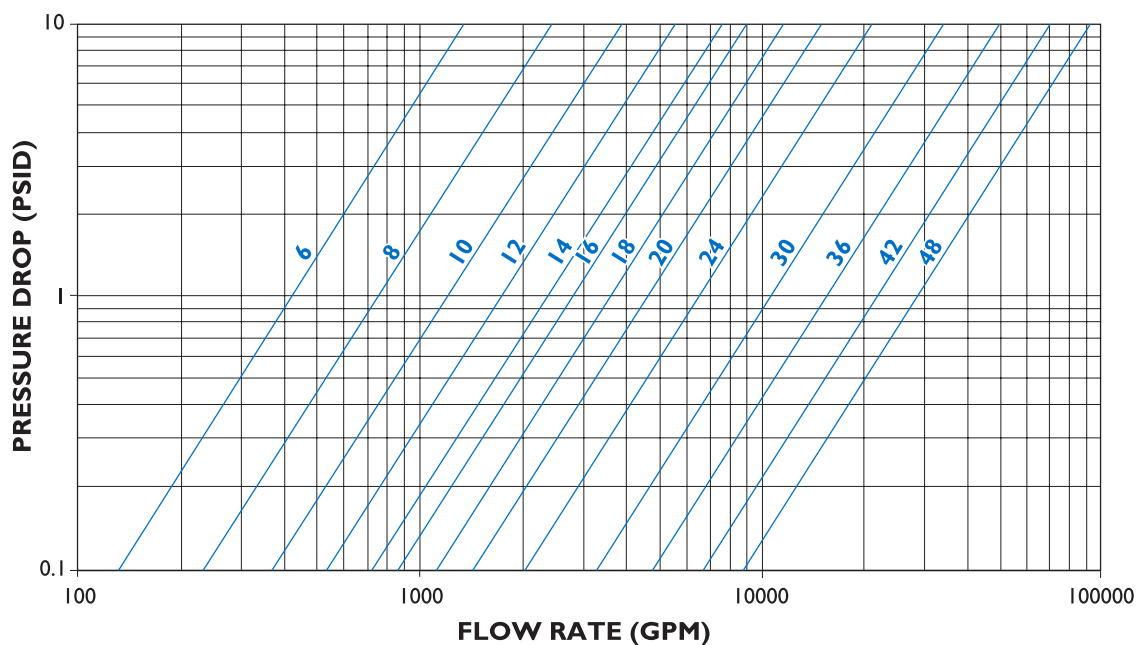

**Notes:** 1. Pressure drop curves are based on water flow with standard screens.